


Dazzling Denim

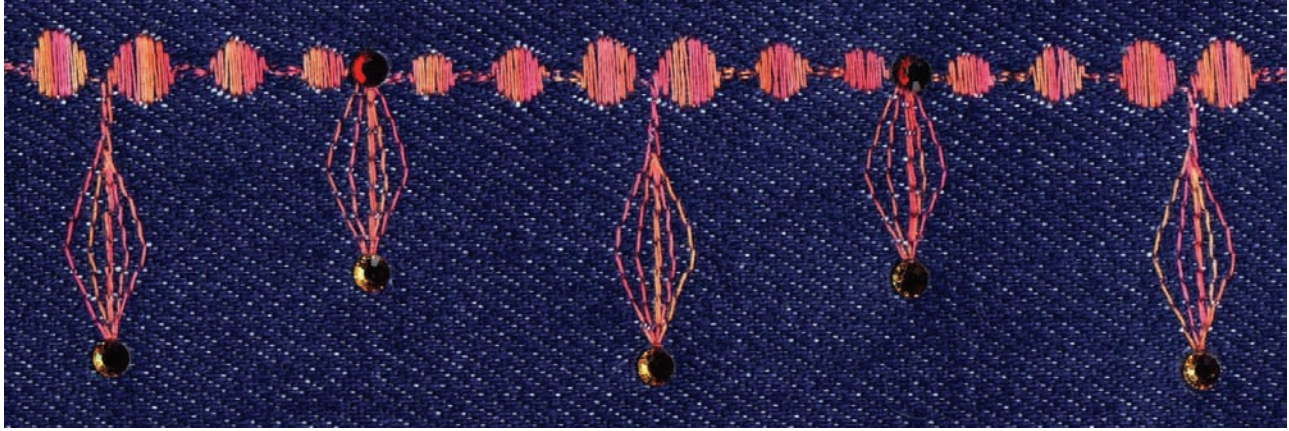

Dazzling Denim

Decorating your jeans and other denim clothing items is all the rage! With sewing capabilities, your only challenge is to decide which stitch or embroidery motif to use. In the above Stitch Recipe, fun stitches are combined along with the incredible 16-Directional stitching capability! The 16-Directional stitching feature can be found on the **artista** 730, 200, 185, and 180; don't forget the 1630 as well! This recipe can be sewn on virtually any machine model, but the 16-Directional feature enables you to sew the recipe in one complete sewing pass.

- ❖ 30+ wt. embroidery thread—Oliver Twist thread was used in sample
- ❖ Microtex Sharp needle—size 90/14
- ❖ Sideways Motion Foot #40
- ❖ The following stitches were used - - -




Combine and Create the Recipe

- ❖ Open Combi Mode on the **artista** 730/200 and combine the following stitches/functions as shown - - -


	Stitch 431 Mirror Image
	Direction 4 - Default
	Direction 4 - Default
	Direction 4 - Default
	Combination Sub-divider 2
	Stitch 439 Default setting
	Direction 8 SL - 0.8mm

	Combination Sub-divider 2
	Stitch 431 Default
	Direction 4 - Default
	Direction 4 - Default
	Combination Sub-divider 2
	Stitch 439 Default setting
	Combination Sub-divider 2

For combining purposes, the first table continues on into the second table.
When the combination is complete, there will be 14 items shown in the Preview screen.
The "actual" sewing view should look like the following - - -

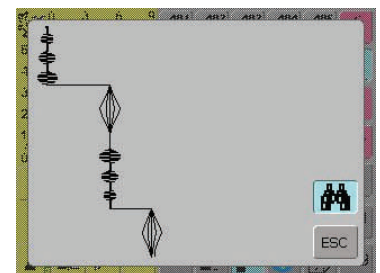



Dazzling Denim

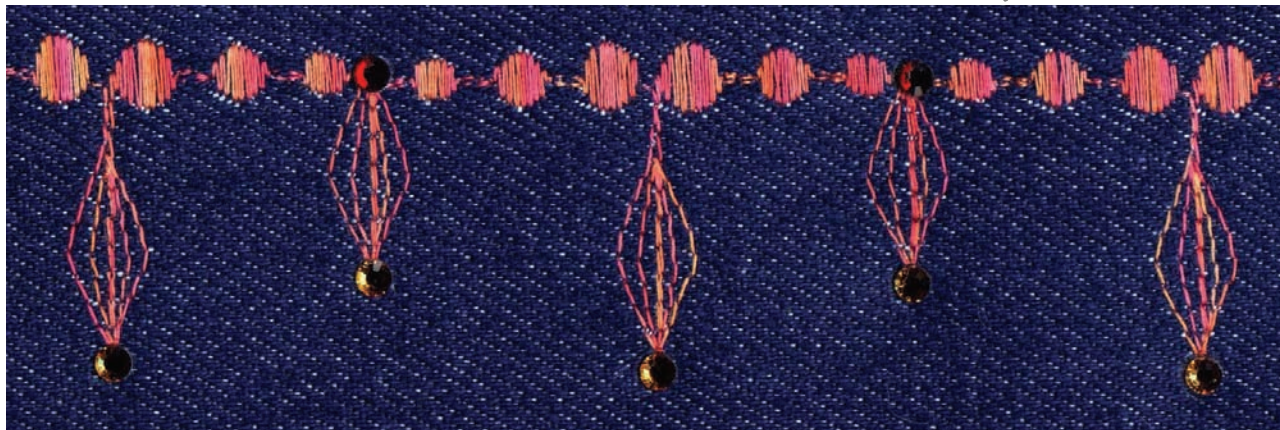


Dazzling Denim, page 2

Sew the Recipe

- ❖ Draw a line (use a removable marker/pencil) to serve as a central axis for creating the recipe.
- ❖ Attach Sideways Motion Foot #40
- ❖ Reduce Motor Speed to $\frac{3}{4}$ or $\frac{1}{2}$ speed.
- ❖ Adjust stitch tensions as needed for thread and fabric selections
- ❖ Align center line of foot to the line drawn on the fabric
- ❖ Begin sewing; sew until the machine stops - Combination Sub-divider 2 acts as the "stop sign"
- ❖ Drop the needle into the fabric using the Heel feature of the foot control
- ❖ Pivot as shown in Picture 2

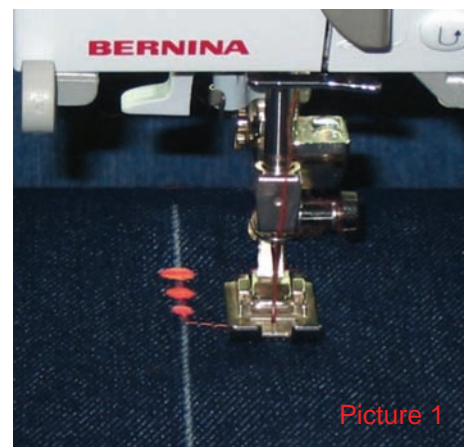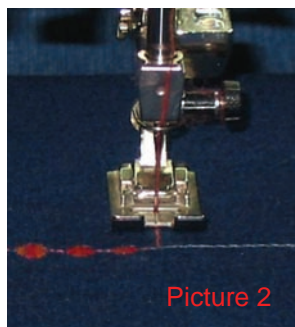

- ❖ Sew the next section of the Stitch recipe until the machine stops again
- ❖ Drop the needle into the fabric using the Heel feature of the foot control
- ❖ Pivot as shown in Picture 3
- ❖ Continue sewing the recipe in the above listed manner as desired

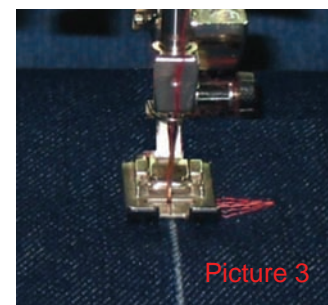

Finishing touches

- ❖ Add sparkle by adding Glitz crystals with the E-Z Glitzer